REMOTE FUNCTIONS

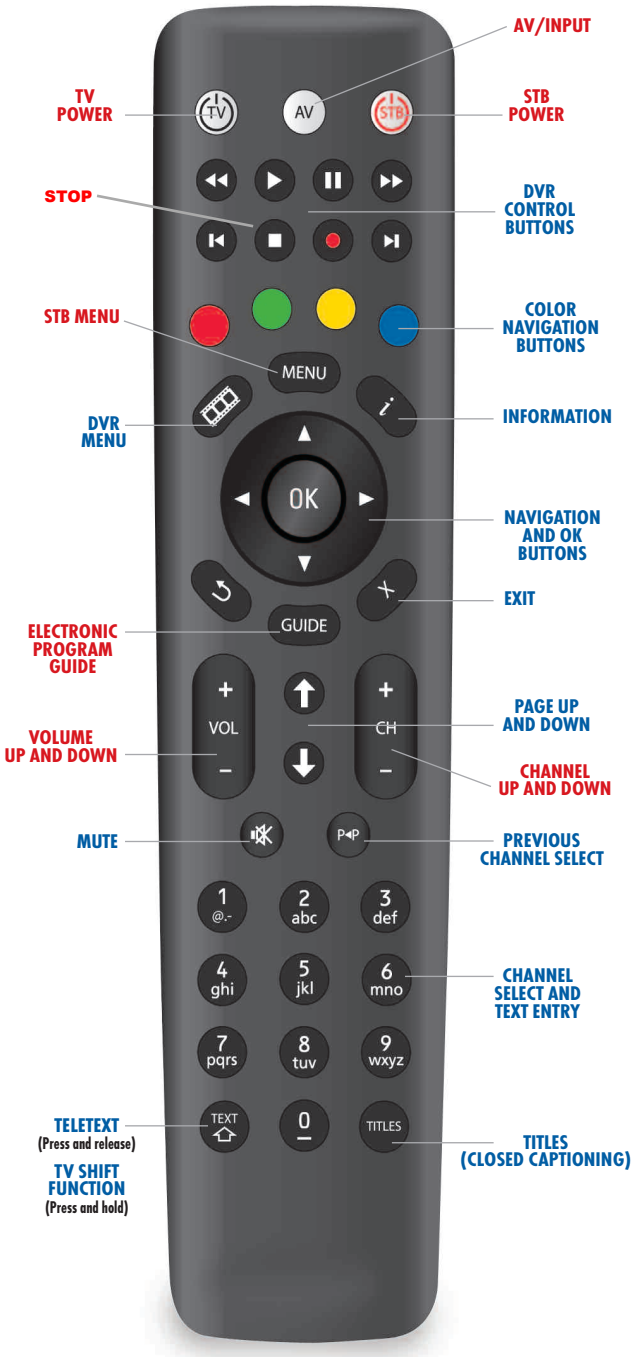

To Purchase a Movie on Pay-Per-View:

[You must buy the movie before or within 10 minutes of the start time]

1. Enter channel 701 – 706
2. Press Guide
3. Use Arrow keys to view movies/events for the day
4. Highlight the movie/event you would like to buy and press OK
5. Scroll to Buy PPV and press OK
6. The purchase price will be displayed. Select Buy to purchase the movie/event.
7. Your movie/event will then begin on schedule.

My Library Menu:

1. Press Menu button
2. Scroll to highlight My Library
3. Press OK
4. Information is located here for Videos, PPV Events, Pay Per Blocks, Sports Packages, Reminders, Messages, and Caller ID.
5. Scroll to category; highlight and press OK to view the stored information.

SETTINGS - Access requires a password. Bloomer Telephone Company will assign a default password that you may change as you wish.

HARDWARE SETTINGS – These settings will be handled by your Bloomer Telephone Company technician upon installation. They will be selected based on your TV.

PROGRAMMING YOUR REMOTE CONTROL – Visit our website for complete instructions on how to program your remote to control your TV.

www.bloomer.net/digital-tv/helpful-hints

HOW TO USE YOUR AMINO REMOTE CONTROL

BLOOMER TELEPHONE COMPANY
The Talk of Your Hometown

1120 15th Ave., Bloomer, WI 54724
715.568.4830
www.bloomer.net

Digital TV Service offered through Celect Communications, an affiliate of Bloomer Telephone Company.

Turn On Your TV Using the Remote Control:

Press the TV Button.

Finding a Channel/Program or Changing Channels:

1. Enter the desired channel number.

   OR

2. Press Guide to view complete list of channels. Scroll through the channel line up using the up/down directional arrow keys located around the OK button. Select the desired channel by pressing OK twice. To scroll by page, use the up/down arrows located directly below the Guide button. The I‹ ›I buttons located in the DVR Controls section will forward the programming guide 12 hours in advance.

Menu Button:

Guide – Takes you to the channel lists.

DVR – **Available with DVR Service**, this will take you to a list of your recordings and scheduled events.

My Library – Stores information such as your Caller ID, PPV Events, and Recordings.

Settings – Requires a password.

Parental Controls – If applicable to your service – Please call our office if you are interested in setting up Parental Controls.

Favorites – Set up your "Personalized Guide" – Please call our office if you are interested in setting up a "Personalized Guide".

Search – Search the Guide.

Programming Guide:

Your Programming Guide has multiple tabbed channel lists [based on your package]. Examples: All, HD, Subscribed, PPV, Favorites. Press Guide repeatedly to scroll through the Guide tabs.

"Gold Star" – On Your Channel Guide: A "Gold Star" ahead of the name of the program listed on your channel guide means that the program is not a re-run.

Titles (Closed Captioning):

Displays text/transcript of the program you are watching. Press Titles button on your remote to enable closed captions, press Titles again to disable it.

Channel Action:

Press Guide

1. Highlight the Program you wish to take an action with: Press OK.

2. A Secondary Menu will read:
   Schedule Event – Schedules Reminders and Autotunes. Also edits recorded show time-frames and frequencies on your *DVR*.
   Record Program – Record a program to your *DVR*.
   Record Series – Record a program series to your *DVR*.
   Set Reminder – Set a reminder of an upcoming show.
   Set Autotune – Choose to have your TV automatically tune to a show.
   Add to Favorites – Select and choose to add to your favorites list, if you have set up a "Personalized Guide".
   Expanded Info – Displays more detail about the program.
   Cancel – Cancels last action.

Schedule Event (DVR):

1. Press Guide button.

2. Use arrow keys to scroll through channels to find program of choice and press OK.

3. Select Schedule Event and follow the instructions on the screen.

Record Programs (DVR):

1. Press Guide button.

2. Use arrow keys to scroll through channels to find the program of choice and press OK.

3. Highlight Record Program and press OK.

4. A red dot will appear next to the name of the program that is being recorded.

5. You may select OK again to edit your recording.

Record Series (DVR):

1. Press Guide button.

2. Use arrow keys to scroll through channels to find the program of choice and press OK.

3. Highlight Record Series and press OK.

4. Two red dots will appear next to the name of the program series that is being recorded.

5. You may select OK again to edit your recording.

DVR Function Buttons:

Available with DVR Service

The Pause/Resume live TV button is located under the AV button on the remote control. Other function buttons located in this area are Rewind, Fast Forward, Stop, and Record. Use these function buttons to control the LIVE program you are currently watching.

To View A Recorded Program:

1. Press DVR Menu button (film strip icon).

2. Highlight Recordings and press OK.

3. Highlight the program of choice and press OK.

4. The following options will appear:
   a) Play Recording
   b) Resume Play
   c) Lock (Blocks other users from deleting your recordings)
   d) Delete Recording
   e) Cancel
   Highlight your selection and press OK.

Setting a Reminder:

1. Press Guide button.

2. Use arrow keys to scroll through channels to find program of choice and press OK.

3. Use arrow keys to scroll down to Set Reminder and press OK.

4. When a reminder is set, a picture of a clock will appear on the channel that was chosen.

5. You may select OK again to edit your reminder.

Setting Autotune:

1. Press Guide button.

2. Use arrow keys to scroll through channels to find the program of choice and press OK.

3. Highlight Set Autotune and press OK.

4. An orange ball will appear next to the name of the program that is being set for autotune. The channel will automatically change when the program begins.

5. You may select OK again to edit your autotune.